


TR-52i Thermo Recorder


How to Download and Save Temperatures

A)

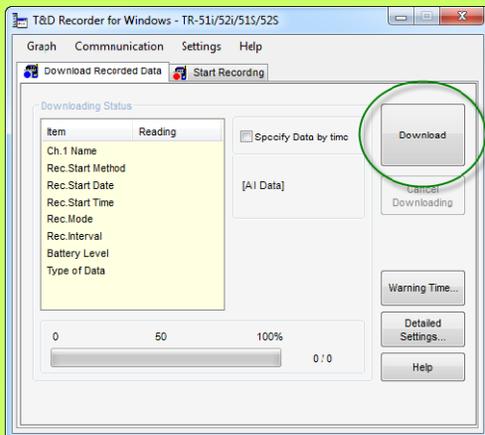


Place TR-52i on communicator and click **Download**

B)

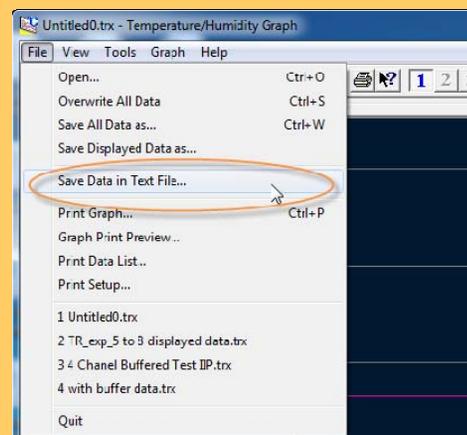


After the graph opens, click **File** and then **Save Data in Text File**

C)

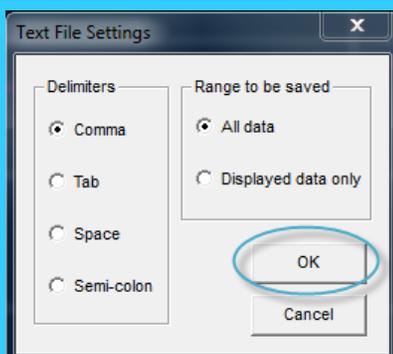

Click **OK**


D)

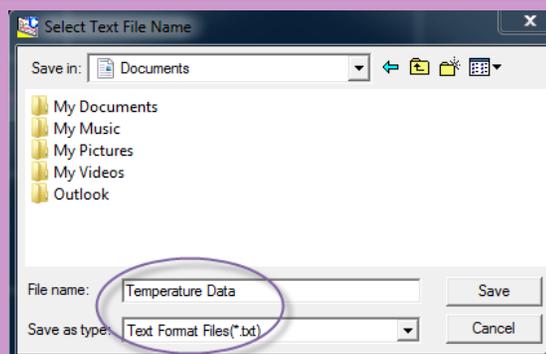

Select folder, type a **File Name**, and click **Save**

TR-52i Thermo Recorder

How to Set Up the Recorder

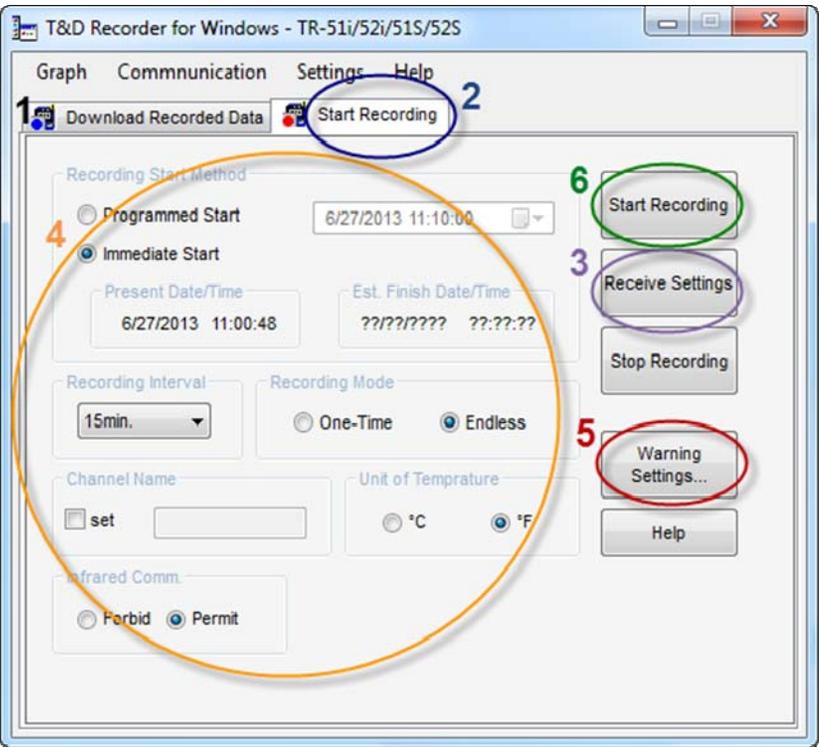

1. Download and save temperatures (see other side)
2. Click the Start Recording Tab
3. Click Receive Settings
4. Verify Settings
 - Immediate Start
 - Recording interval of 15 minutes
 - Endless recording
 - Fahrenheit
 - Permit infrared communication
5. Click Warning Settings
 - Refrigerator 35° to 46°F
30 minute judgment time
 - Freezer -58° to 5°F
60 minute judgment time
6. Click Start Recording

*Clicking **Start Recording** will communicate settings to the TR-52i device and will erase all previously recorded temperatures.