

SPECIAL OFFER: *Free Radon Test Kit*



IDAHO DEPARTMENT OF  
HEALTH & WELFARE

Name: \_\_\_\_\_

Email Address: \_\_\_\_\_ (VERY IMPORTANT)

Address: \_\_\_\_\_

City: \_\_\_\_\_ State: ID Zip Code: \_\_\_\_\_

Phone: \_\_\_\_\_ - \_\_\_\_\_ - \_\_\_\_\_

**R  
A  
D  
O  
N**

**Mail this coupon to:**

AIR CHEK  
P.O. Box 2000  
Naples, NC 28760

*For Idaho Residents Only  
One test kit per household  
\*While Supplies Last*

COUPON #121

For your FREE radon test kit print this coupon and mail it to:

AIR CHEK  
P.O. Box 2000  
Naples, NC 28760

Please see pages 2 and 3 for radon test kit instructions.

# Radon Test Instructions

Use this radon test on the lowest level where you spend time in your house (example: basement or first floor bedroom). All windows and outside doors to the testing room need to be closed before starting the test and remain closed during the test.

**Do not place test kit in a closet, crawlspace, kitchen or bathroom.** Do not use the crawlspace for this test even though it is listed on the packet.

## Let's Get Started


1. Write test kit number on this line: # \_\_\_\_\_ for your records.
2. Use a **pen**, press hard and write your name and address on the lines.
3. Circle the day and hour you start the test on the left clock.
4. Circle where you put the test.

## Open the Packet

1. Hold the packet on the ends and push the edges together.
2. Put the square foam piece in the packet. Make sure the edges are even.



Place or hang the test kit 2 to 6 feet from the floor where it will not be disturbed (for example on a table.)

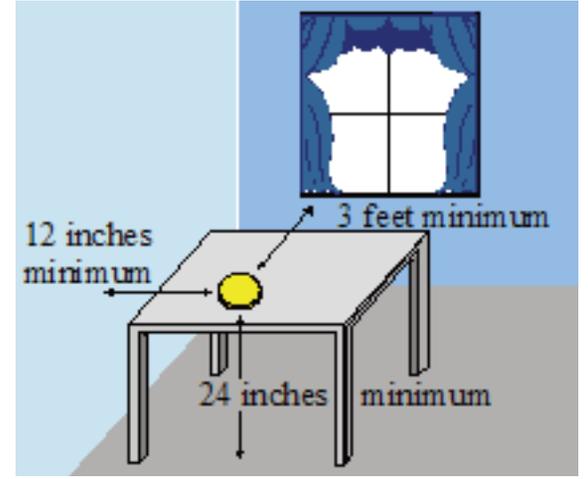

You must leave the test packet out for at least 72 hours (3 days) but no more than 7 days.

## Let's Finish the Test

At least 72 hours (3 days) have passed and no more than 7 days so it is time to send in your packet.

1. Throw away the piece of foam.
2. Circle the ending day and hour on the right clock.
3. Circle the average temperature of the room where the test packet was placed and circle all of the remaining questions.
4. Fold back the packet flap, remove the protective cover and press hard to seal. The packet must be sealed air tight.
5. Drop in mail box and you are done!

**Tip: You may consider express or priority mail to make sure your test arrives no more than 8 days after you finish your test.**

Your results will be mailed to the address you put on the packet. If you don't want to wait, you can use your kit number and access your results on [www.radon.com](http://www.radon.com) usually within a week of your packet's arrival.

## Sites That May Interest You

[www.epa.gov/radon](http://www.epa.gov/radon)

[www.healthandwelfare.idaho.gov](http://www.healthandwelfare.idaho.gov)

[www.projectfilter.com](http://www.projectfilter.com)

[www.epa.gov/enviro](http://www.epa.gov/enviro)

[www.cdc.gov](http://www.cdc.gov)



IDAHO DEPARTMENT OF  
**HEALTH & WELFARE**